Lenco

Kiztab-520 Mini

5" (13 CM) TABLET WITH ANDROID™ 4.4

User Manual

For information and support
www.lenco.com

Table of content

Startup and Shutdown 7

Usage of the Touch Screen 7

Interface Introduction 7

1. Desktop 7

2. Screen Lock 8

Program Operation Instructions 8

1. ToDo 9

2. Maps 9

3. Sound Recorder 10

4. Camera 12

5. Broswer 12

6. Play Store 13

7. Calendar 14

8. Calculator 14

9. Downloads 14

10. Clock 14

11. E-mail 16

12. File Manager 18

13. Gallery 19

14. Video Player 20

15. Music Player 21

16. Kidoz user guide. 22

Settings 23

Wi-Fi Network Settings 24

Usage of Extended Storage 25

1. Usage of the U Disk 25

2. Usage of the SD Card 25

Connect to PC 26

Charging 27

Matters Needing Attention 28

Dear customer,

Thank you for buying this Lenco product. Quality and usability is our top priority. In order to let you fully enjoy this tablet, we have manufactured this product using high quality standards, materials, components, and care.

Please read all safety instructions and national restrictions, before you use this tablet.

Note:

This user manual was printed prior to the development of this product. When operability or other functions needed improvement, priority went to the product specification itself, and not to this manual. In such instances, the instruction manual may not entirely match all the functions of the actual product. Therefore, the actual product and packaging, as well as the name and illustration, may differ from the manual. The screen shown as an example in this manual may differ from the actual screen display.

Lenco is not liable for any consequential damage.

Safety instructions

IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY BEFORE USE.

CAUTION

RISK OF ELECTRICAL SHOCK

DO NOT OPEN

CAUTION: TO PREVENT AN ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS. THERE ARE NO USER SERVICEABLE PARTS INSIDE. REQUEST A QUALIFIED SERVICE PERSON TO PERFORM SERVICING.

This symbol indicates that there are important operating maintenance instructions in the user manual accompanying this tablet.

This symbol indicates that dangerous voltage is present within this tablet, constituting a risk of electric shock or personal injury.

Keep these instructions in mind:

- Do not use this device near water.
- Clean only with a slightly damp cloth.
- Do not cover or block any ventilation opening. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
- Install in accordance with the supplied user manual.
- Don't step on or pinch the power cord. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power cord, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
- Unplug this device during lightning storms or when unused for a long period.
- Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products.
- Avoid using the device near strong magnetic fields.
- ESD can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.

Safety instructions - continued

- WARNING! NEVER INSERT AN OBJECT INTO THE PRODUCT THROUGH THE VENTS OR OPENINGS. HIGH VOLTAGE FLOWS THRU THE PRODUCT AND INSERTING AN OBJECT CAN CAUSE ELECTRIC SHOCK AND/OR SHORT CIRCUIT INTERNAL PARTS. FOR THE SAME REASON, DO NOT SPILL WATER OR LIQUID ON THE PRODUCT.
- Do NOT use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
- Do not use this device when condensation may occur.

This tablet is produced according to all current safety regulations. The following safety tips should safeguard users against careless use and dangers involved with such use.

- Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke,

an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.

- This device must be well ventilated at all time!
- This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
- The socket outlet must be installed near the equipment and must be easily accessible.
- Do not overload AC outlets or extension cords. Overloading can cause fire or electric shock.
- Devices with Class 1 construction should be connected to a main socket outlet with a protective earthed connection.
- Devices with Class 2 construction do not require a earthed connection.
- Keep away from rodents. Rodents enjoy biting on power cords.
- Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
- The screen is made of plastic and can break when damaged. When broken, be careful with sharp edged plastic splinters to avoid injury.
- Avoid placing the device on any surfaces that may be subject to vibrations or shocks.
- When the device is not in use for long periods, unplug the AC power cable for safety reasons.
- Do NOT knock on, press, hit or shake the screen as you may damage the internal circuits.
- To clean the device, use a soft dry cloth. Do NOT use solvents or petrol based fluids. To remove severe stains, you may use a damp cloth with dilute detergent.
- The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- If the device will not be used for an extended period, please charge the battery at least once per month to maintain battery life.

Safety instructions - continued

- Charge the battery if:

  a) The battery level icon displays ▭ (An empty battery)

  b) The device switches off automatically when restarted.

- Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.

WARNING: Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.

The USB memory stick should be plugged into the unit directly. Don't use an USB extension cable because it can cause interference resulting in failing of data.

BEFORE SENDING YOUR DEVICE TO LENCO DO NOT FORGET TO BACKUP YOUR DATA. SUPPLIER IS NOT LIABLE FOR ANY DATA LOSS.

Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

Startup and Shutdown

Startup: Please press and hold the Power Key for 3s or 5s.

Shutdown: Press and hold the Power Key for 3s or 5s → Click **Shutdown** → and **Confirm.**

Dormant State and Activation: Press the Power Key to realize **Dormant State** or **Activation**.

Forced Shutdown: If the device has not responded for quite a while, please press the **Reset Key** to reboot the device.

Note: If not necessary, please do not try forced shutdown, and the User shall shut down the device according to relevant procedures.

Reset Key: Please press the Reset Key to conduct rebooting.

Usage of the Touch Screen

Click: Select one program icon and then click it to run the selected program or resort to the pull-down menu.

Press for a while: Select and press one Icon for a while and move it to the Desktop for display.

Pull and Move: Pull and Move one Icon to shift between two different interfaces.

- ☆ In order to protect the Touch Screen from scratches or crush risk, please do not place other objects above the Screen.
- ☆

Interface Introduction

Desktop

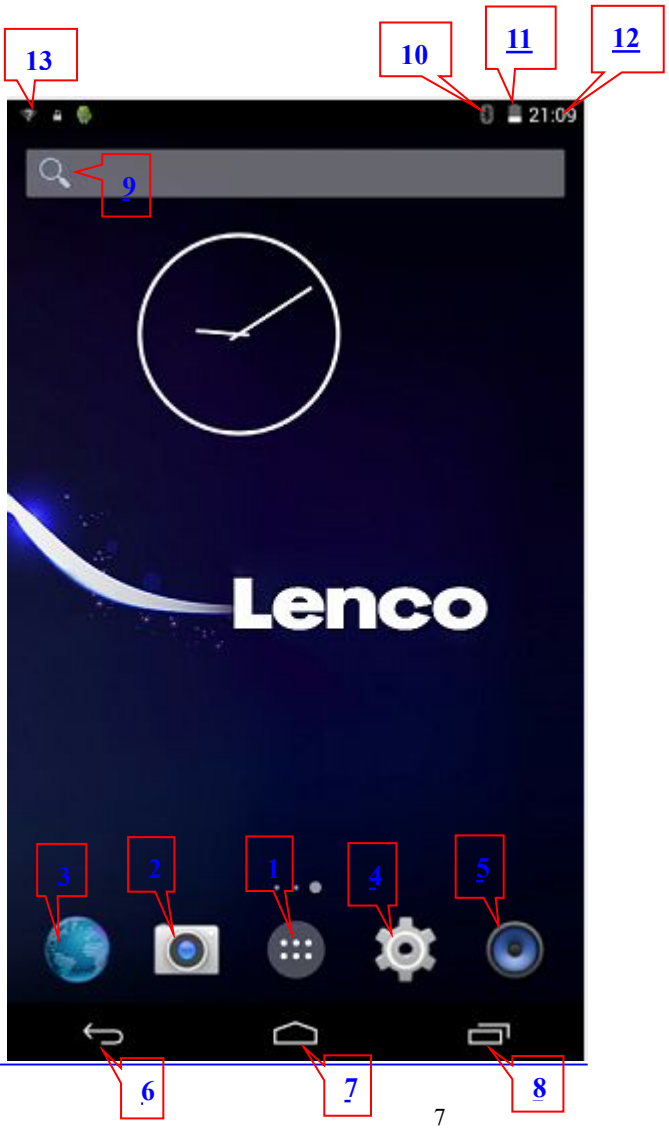

1: View All Application Programs \2:Camera \3. Browser\4. Setting\5. Music\6. Back to Current Operation\7. Back to the Desktop from the Program Interface\8. Multitask Selection Key\ 9. Search \ 10. Bluetooth \ 11. Battery power status, only when this device the battery percentage, it will be revealed \ 12. Time \13: Wifi Connection Signal;

Screen Lock

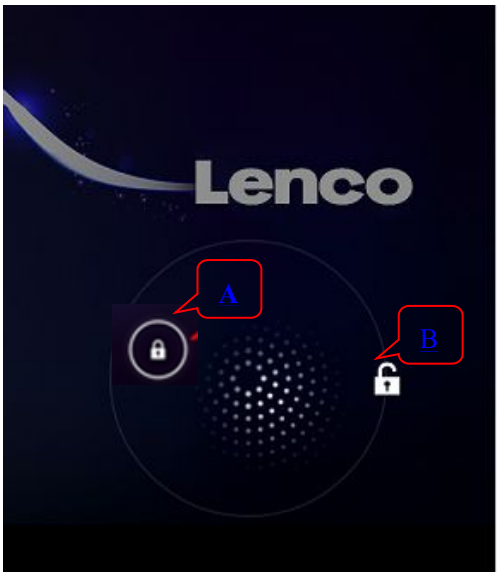

The device will enter stand-by status if there is no operation for quite a while or the User has quickly pressed the Power Key. There are two stand-by statuses: Deep Sleep and Light Sleep --- under the Deep Sleep mode, the Touch Screen is locked and dark, and it will wake up and enter the Light Sleep mode after the User has pressed the Power Key. Then, the stand-by screen will reveal A Touch Key and B Touch Key; when **the A Touch Key** has been pressed, it will show , and the User can try to pull it to the **B** Icon as shown in Diagram 1 to unlock the Display Screen; represents the Route when the User's fingers slip around the Screen.

Program Operation Instructions

1. ToDo

1. Click and enter the Editing Interface which will then respectively reveal TODO and DONE.

2. Click the Icon as shown in the A area, and then the User can try to add a new ToDo. In the Title Area, the User can summarize the new ToDo; and in the Details Area, the User can describe the detailed content. When all details have been completed, the User can click DONE on the top right corner to conclude the New ToDo settings.

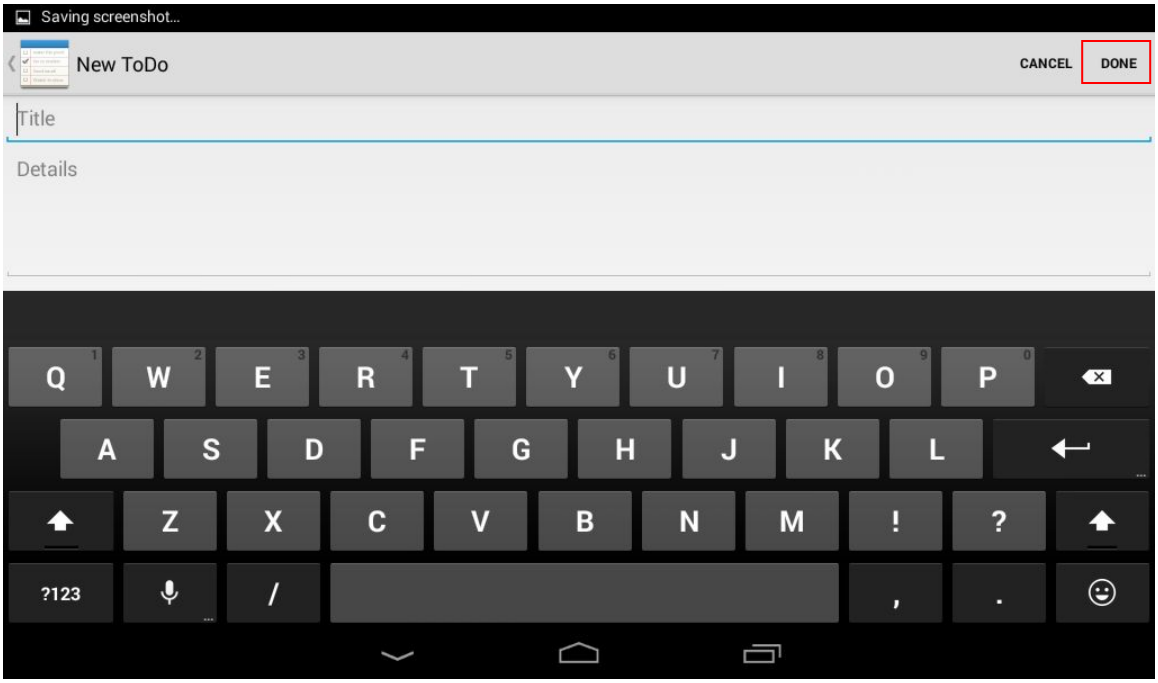

2. Maps

☆ *In order to enable this function, this device must be connected with the Internet.*

When the device has been connected with the Internet, please click

to automatically locate the place where you stand; as shown in the following Diagram, please find the information you need;

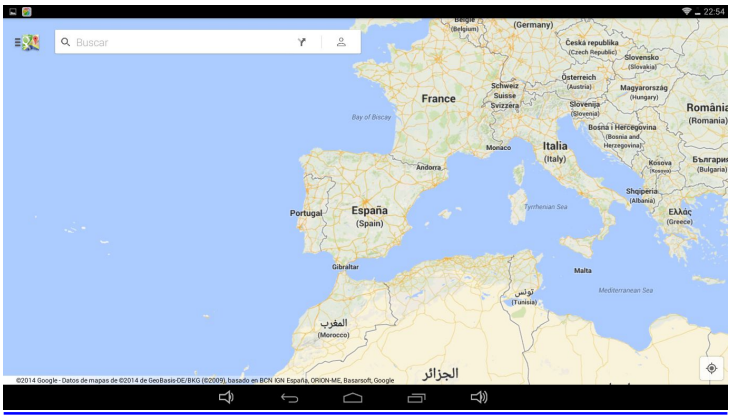

3. Sound Recorder

Click

to enter the Sound Recording Interface (as shown in the following Diagram).

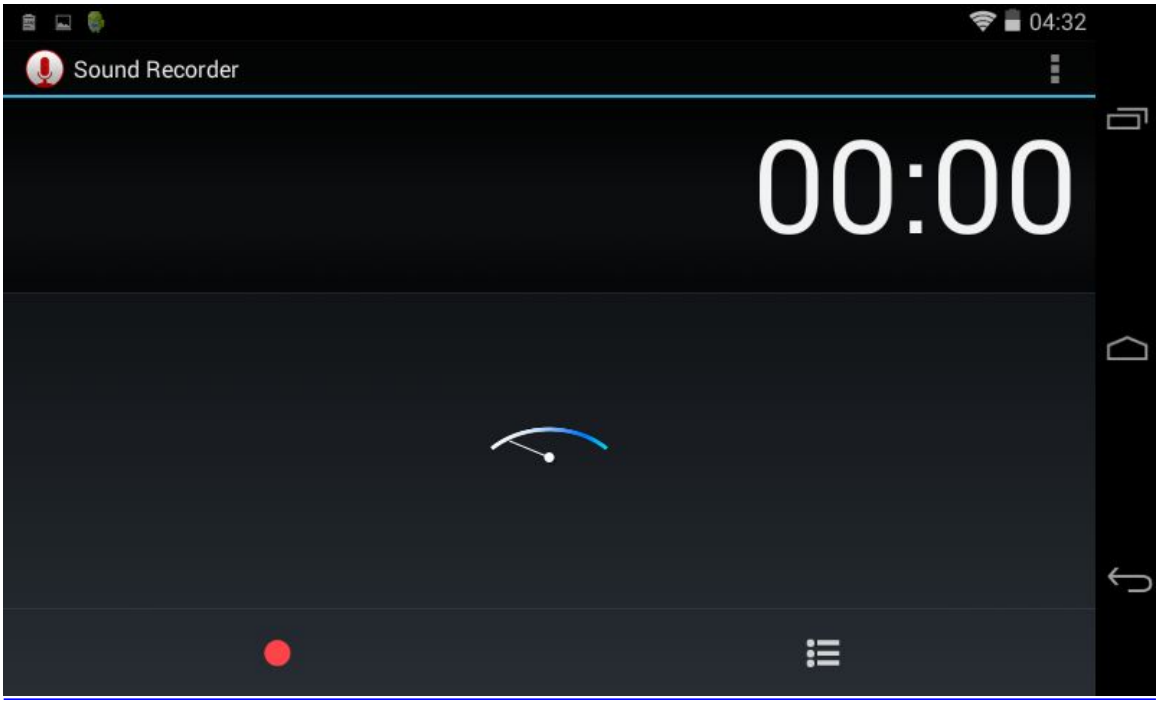

Click
to start recording and enter the Recording Interface.

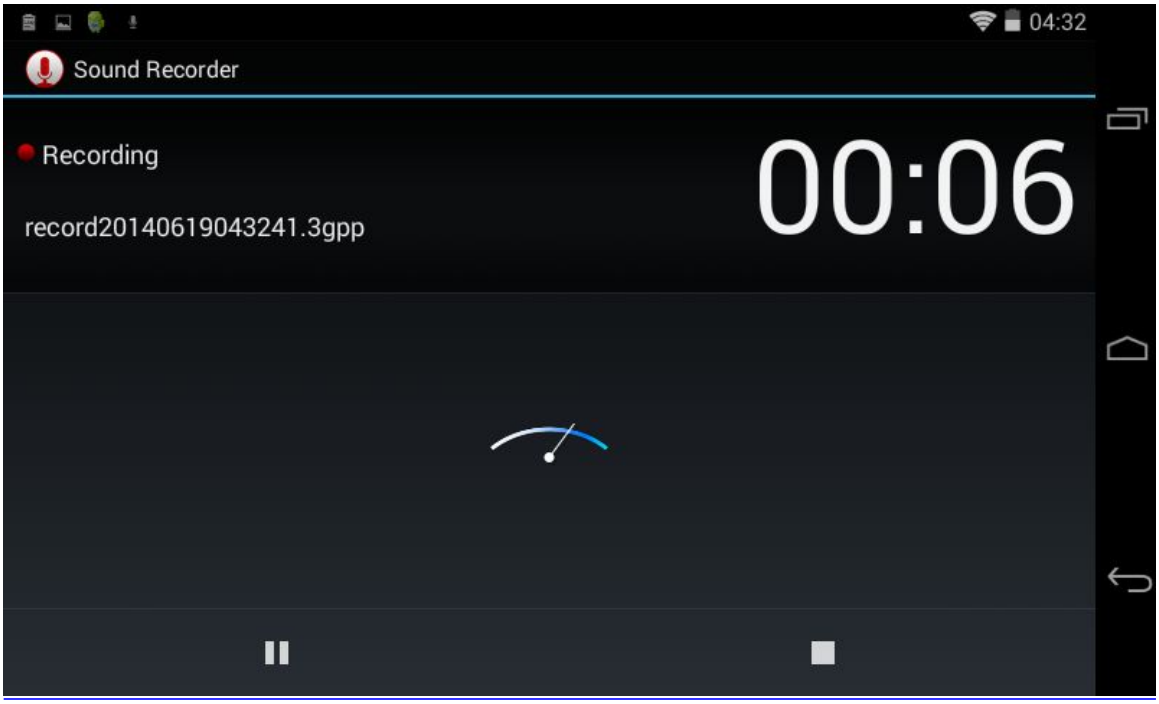

Click to pause and then click to finish recording; the shown interface is as follow:

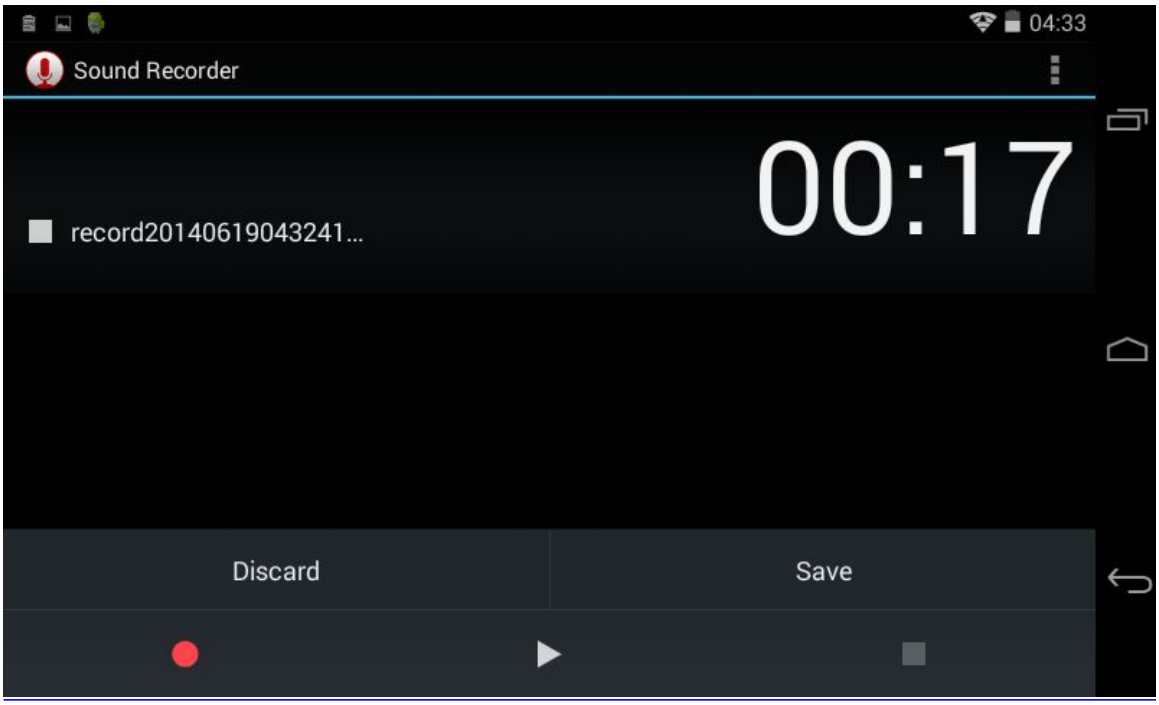

Click to conduct recording again, and click  to play the previous Recording File. The User can choose between Discard and Save (the recording file).

4. Camera

Click

and activate the Camera as shown in the following interface:

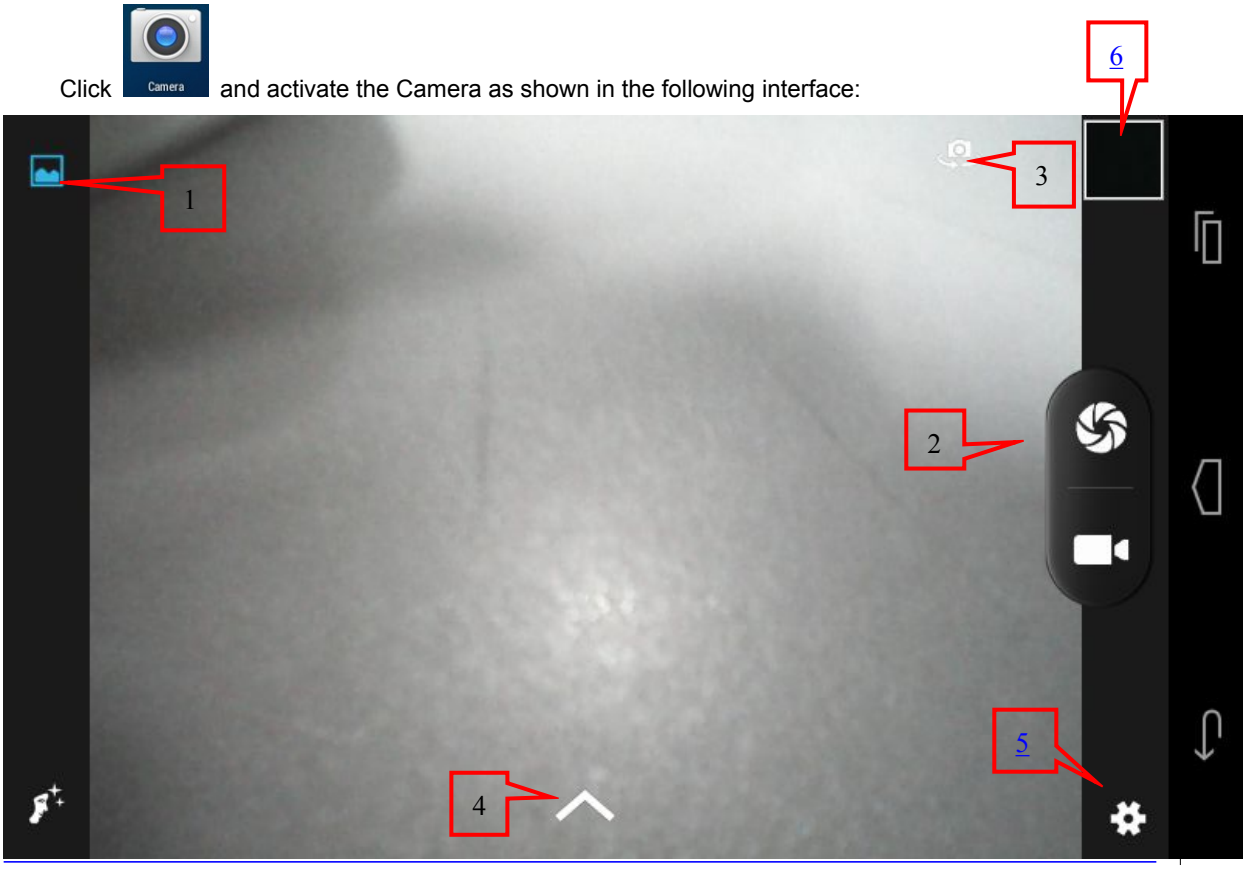

Photo/Video

1. Select the Photo Mode, and then enter Facial Beautification Mode or Panorama Mode etc.
2. Click and take a photo; click and switch to Video Mode to start video recording; click and pause. The recorded video will be automatically saved.
3. Click and shift between the Front Camera and Rear Camera for taking a picture or recording a video. (Only for the double-camera Model.)
4. Click to conduct related settings including Sensitometry, Color Mode, Degree of Balance and Day/Night Mode etc.
5. Click here to conduct settings for all options including turn on/off various functions and save the size of a photo.
6. Click here to view photos and videos you have saved.

5. Browser

Click 

and enter Browser pages:

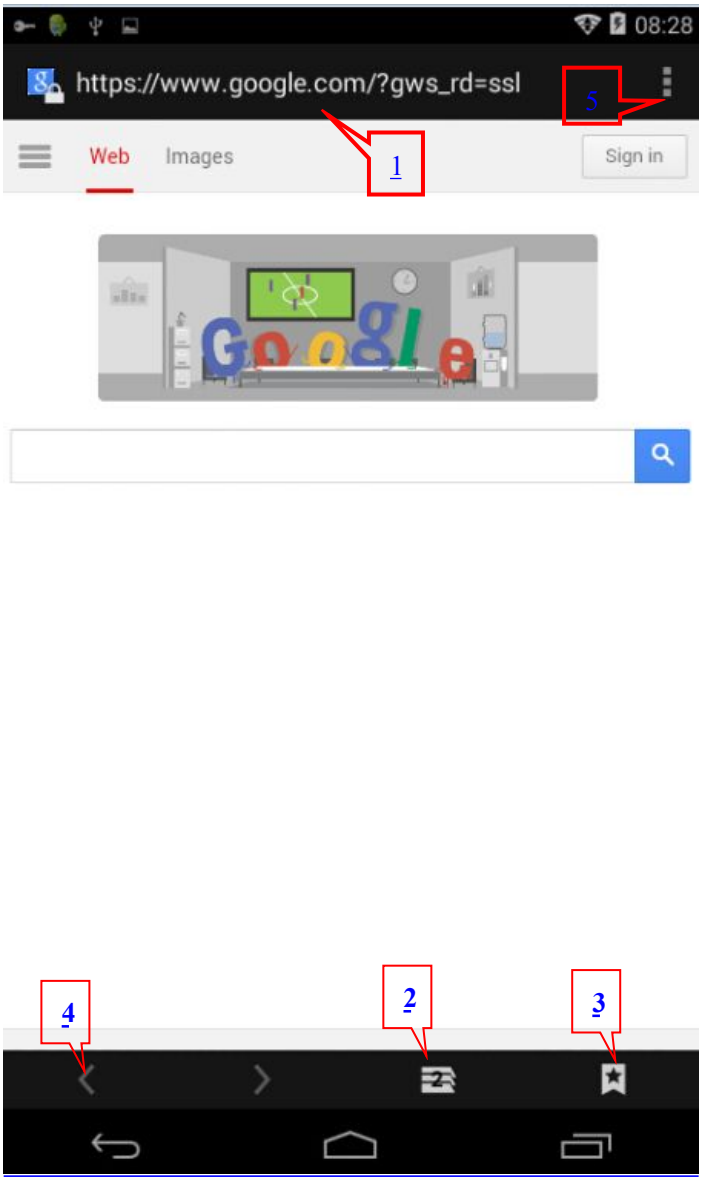

Then, site navigation will be revealed and the User can click and directly enter the webpage as they like.

1. Input the site URL here and click GO to view the webpage you want;
2. Click here to add a new dialog box by means of the same procedure;
3. Different Keys at this Area from the Left to the Right are respectively “Add this Webpage to Bookmarks” , “Search or Input a site URL” and “Select a Bookmark”;
4. Different Keys at this Area from the Left to the Right are respectively “Back to the Previous Webpage”, “Enter the Current Website” and “Refresh”;
5. The User can conduct all settings for the Browser here; click here to reveal the pull-down menu.

6. Play Store

Click 

to search and download relevant application programs.

Enter the Play Store for the first time and the System will ask you to log in google account (if you do not have a Gmail account, please apply for one account in http://gmail.google.com).

7. Calendar

Click 

and enter the Calendar Application. There are two ways to conduct time settings. It is possible to synchronize with the Internet; or the User can conduct Time & Date Settings manually.

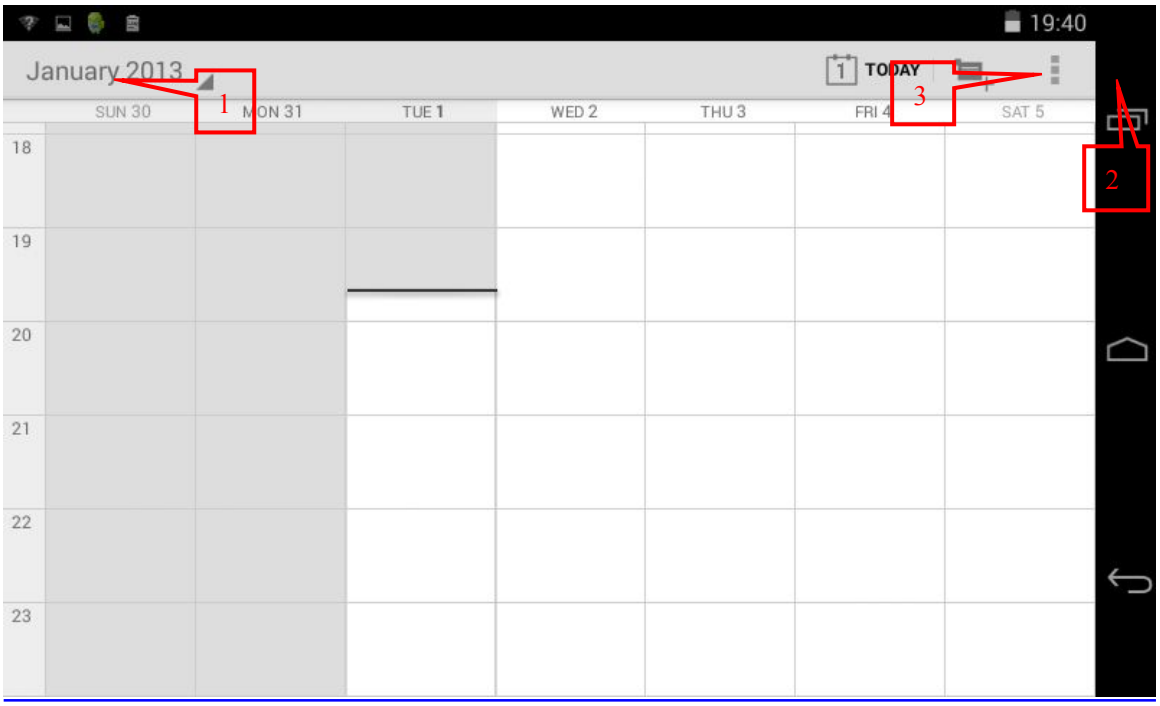

1. Please select the Display Mode for the Calendar including Day Mode, Week Mode, Mouth Mode, and Schedule Mode. Week Mode is the current mode by default;
2. This is the Menu for Calendar options; click the Icon and turn on/off the Menu;
3. This is the Icon for “Add A New ToDo”. Click here and enter the schedule setting interface. Upon the completion of settings, the date with a new ToDo will be in dark grey.

8. Calculator

1. Click

and enter the Calculator Application.
2. Click and select numbers and symbols to conduct calculation.
3. Click **X** to eliminate numbers and symbols one by one, and press **Clear** for a while to eliminate all numbers and symbols.

9. Downloads

1. Click

and activate the Downloads Management.
2. View various software programs which have been downloaded at present and select the software application you want to conduct installation.

10. Clock

Click

and Current Time and Date will be revealed.

Clock

The default interface is the Clock Interface.

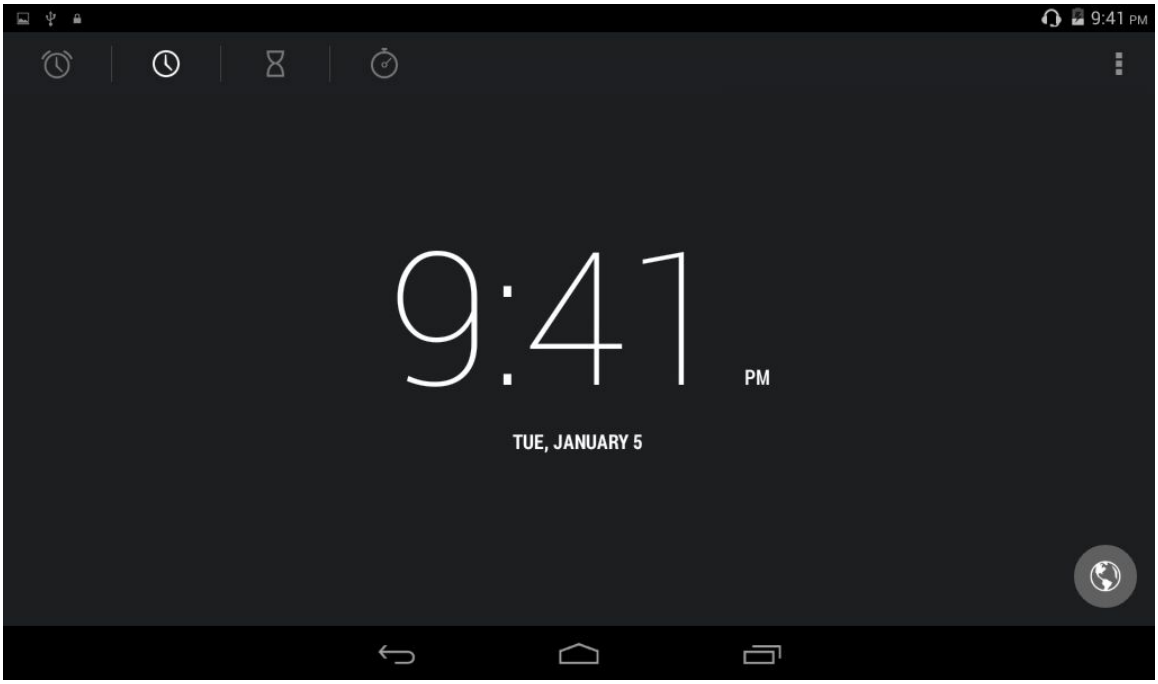

Click and select the Time Zone of the City where you live.

Alarm Clock

Click the Icon on the Top Left Corner to enter the Alarm Clock Interface:

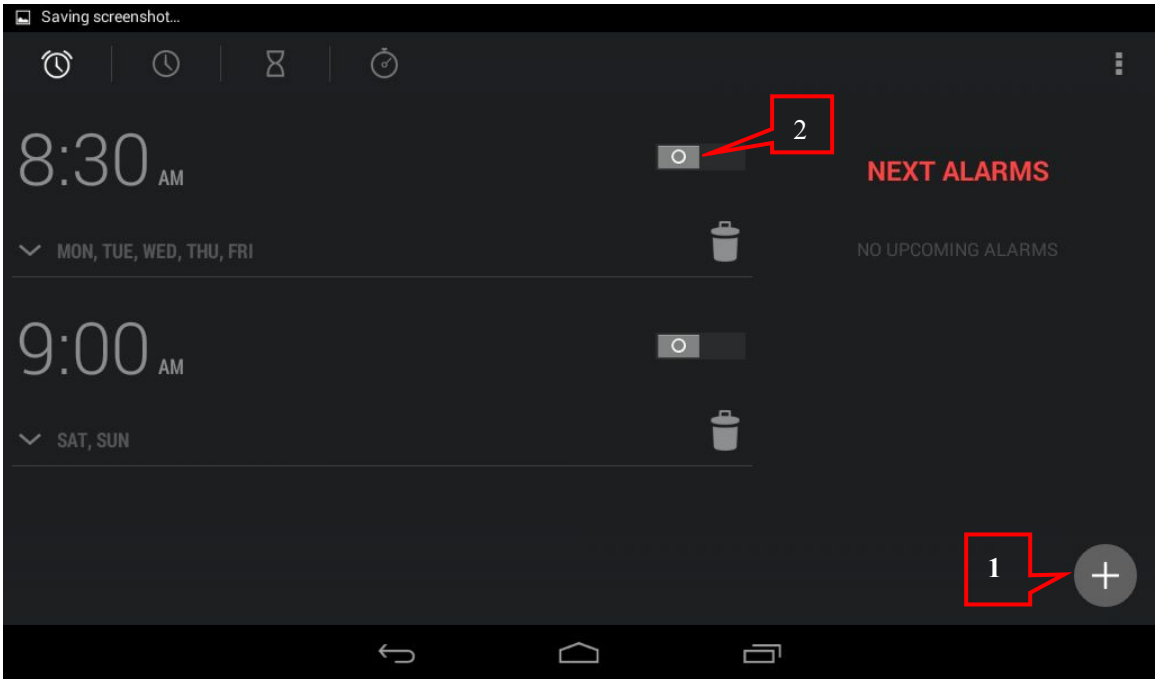

1. Click here to add a new Alarm.
2. Click here to turn on/off an Alarm. The Left Side means OFF, and the Right Side ON.

   When an Alarm has been activated, the Icon will appear on the top right corner.

3. When an Alarm is sounding, the user can click “Cancel” to stop it, and click “Pause” to make the alarm sound again 10 minutes later.
4. Click to delete upcoming Alarms.

☆ If the User do not select **Repetition**, the Alarm Clock will sound for once and then be automatically deleted.

11. Email

☆ *This device supports POP3 and SMTP Accounts.*

Add one (more than one)Email Account

You can input one or more than one Email address as you like in this device.

1. Click the Email Icon 

.
2. In the **YOUR ACCOUNT** Interface, please click **NEXT.** If you use the Email service for the first time, you shall comply with relevant procedures directly proceeding from the following Step 3.
3. Click the Options for Email Addresses, and then input your Email address.
4. And then correctly input your Email password.
5. Click **NEXT**.
6. The Server Configuration is to automatically fill the Supplier (namely gmail.com and so on) according to the User’s Email Account. However, if you want to change the Server Configuration, please click Manual Settings and conduct relevant settings. Upon the completion of settings, please Click NEXT.
7. Optional: Input the Account Name
8. Input the Name for sending e-mails, and then click **FINISH.**

☆ Upon the completion of settings, please confirm with your Email Supplier whether their server supports POP and SMTP transport protocol if your device cannot connect to a free Email Account.

My Messages

1. Click the Email Icon 

.
2. If the User has only configured one Email Account, the User can open it very quickly; if the User has configured more than one Email Account, the list of Email Accounts will be displayed.
3. Click the Email Account you need, and then click **My Messages.**

View an Email

1. In **My Messages,** click and view the e-mail you want.
2. For attachments, please click and enable relevant application programs; or you can click and save them to your SD Card.
3. If you want to reply an e-mail, please click **REPLY** or **REPLY All.**
   a. Input the words you want to reply.
   b. Click **SEND** to immediately send your reply e-mail; click **SAVE** to save your reply e-mail without sending or discarding it。
4. If you want to delete an e-mail immediately, please click **DELETE.**

Write a New Email

1. In **My Messages,** click the symbol **+** beside **MENU** and select **WRITE A NEW MESSAGE.**
2. Then, please input the Email address of the Receiver.
3. Or, if you want to copy a message or send a BCC (Blind Curtesy Copy) to the Receiver, please click MENU→add a copy of message or a BCC, and then input the Receiver's e-mail address.
4. Please input one Title for the message you want to send in the Title Bar.
5. Click **WRITE A NEW MESSAGE** and then input your personal information.
6. If necessary, please click MENU→ **ADD AN ATTCHMENT** to add the attachment you want to send.
7. When you finish writing the message, please click **MENU** and **SEND.**

Edit the Email Account

1. Click the **Email** Icon 

.
2. In **My Messages,** click **MENU** and select **Account Settings.**
3. Please set your Email account as you like.
4. Click and go back to **My Messages.**

Delete An Email Account

☆ *If you have configured more than one Email Account and have deleted the default account, the next account in order will then be the default account in your system.*

1. Click the **Email** Icon 

.
2. In **My Messages,** click **Menu→ Accounts.**
3. Click and delete the Account you want.
4. In the **Account Options**, please click and **Delete** the Account you want.
5. Click **Confirm** to successfully delete the account.

Set a Default Email Account

Since you shall have a default Email Account, you need select one from your different accounts as the default Email Account.

1. Click the **Email** Icon 

.
2. In My Messages, click Menu→ Account Settings.
3. Click Default Account for confirmation.

If you have deleted the Default Account, the next Account in order will then be the Default Account in your system.

12. File Manager

Click the Icon 

to view all files saved in the Memory Devices (including the Internal Storage, SD Card, and USB Storage) and to conveniently install relevant Android application programs for your device.

1)Android 4.4 O.S occupied: 1.7GB

2) Internal storage(for APPS): 1.16GB

3) USB available storage: 0.91GB

So total 1.7+1.16+0.91=3.77GB almost 4GB

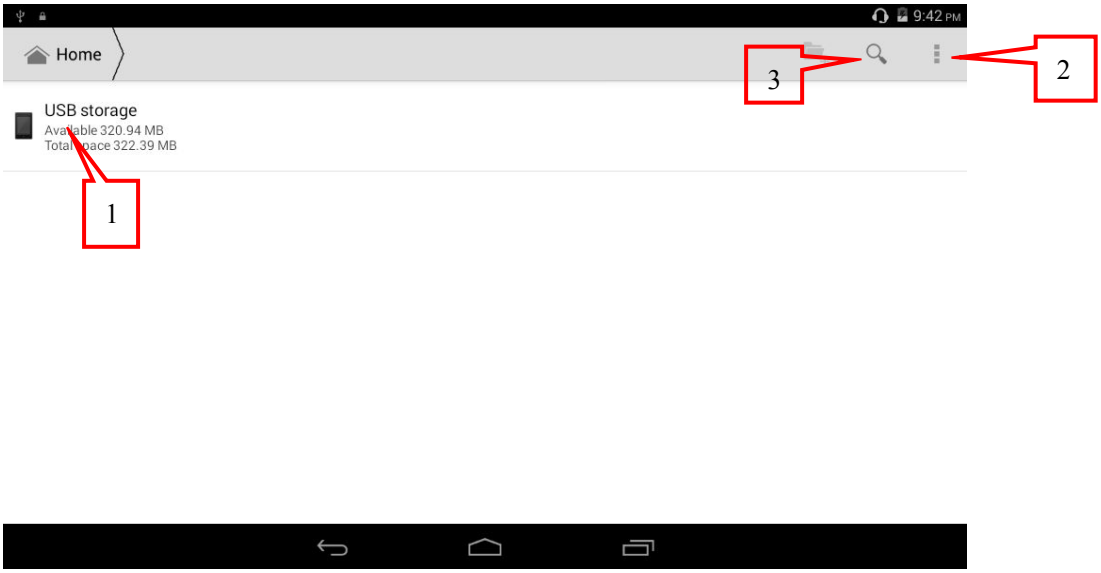

1. Click here and directly enter the selected storage device; if the SD Card or other USB external devices (is)are available, (it) they will display themselves in proper order;
2. Through the Menu options, it is possible for the User to rank and display/hide files;
3. Click this Icon, and you can search and find the file you want.

Copy Files between Different Devices

By means of File Manager, files can be copied and pasted between the external storage and the internal storage/PC. If files need to be copied into this device, please firstly copy that to the SD Card or USB Storage.

1. When you have entered the Menu under the Storage, you can press the file for a while, and options (Share, Copy, Delete and Cut) will appear; on the right side, it will reveal , you can click **FINISH** to enter the following interface.

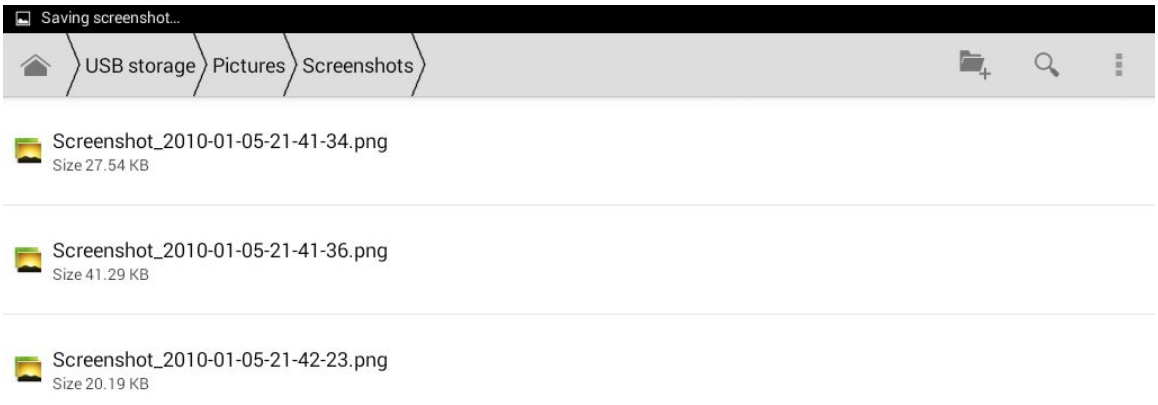

Then, you shall click to go back to the Storage Interface, and select a Device symbol. Click the symbol to paste the file.

13. Gallery

Click the Icon

and enter the Gallery.

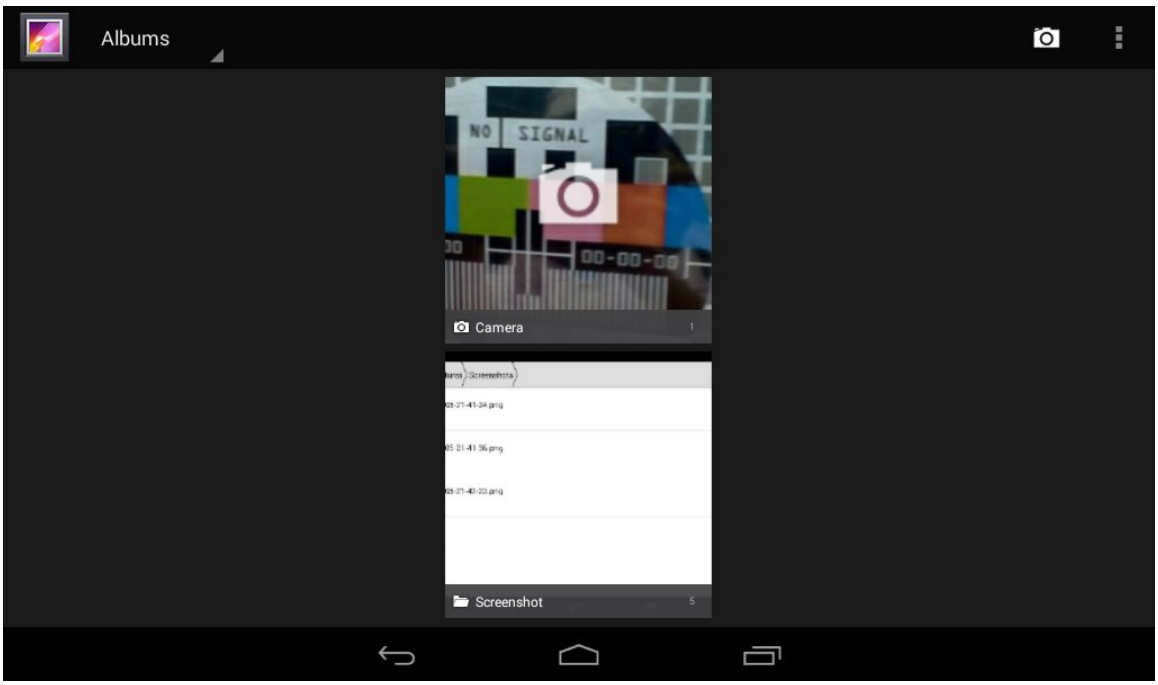

Click Albums and select a Mode to classify your photos. Click a photo and view it directly. Click the Camera Icon on the top right corner and enter the Camera Mode.

14. Video Player

Click

and enter the Video Playing Interface;

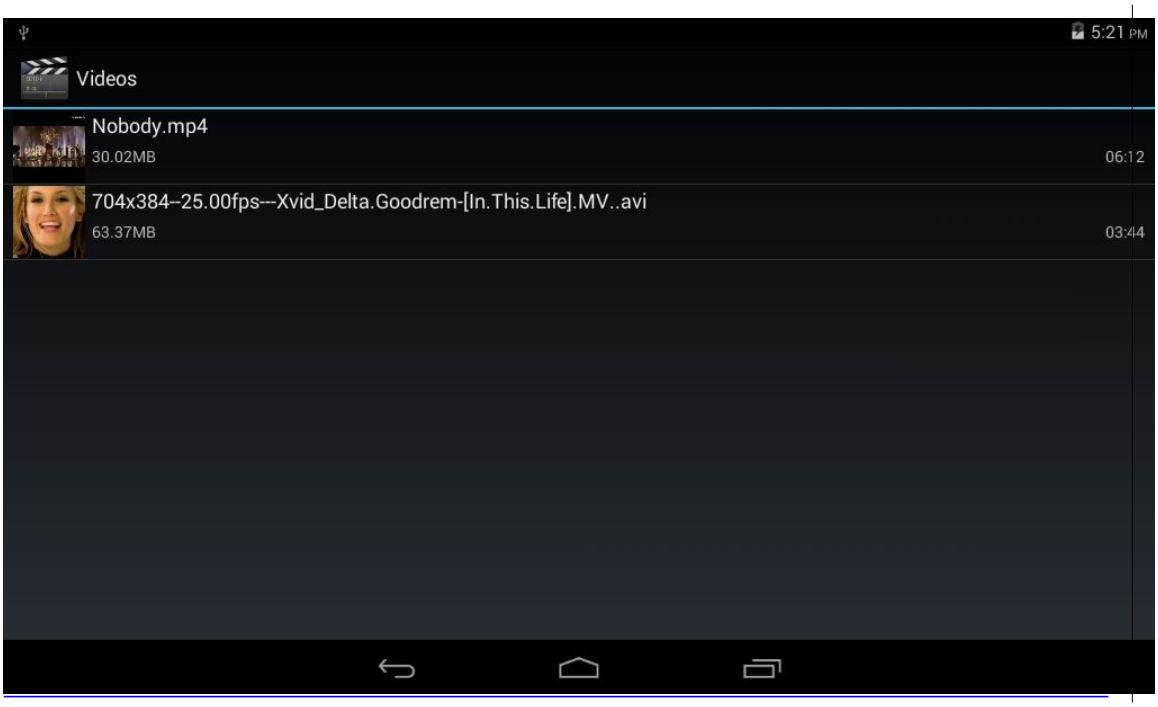

Select the Video you want and play it:

1. Click here to Play/Pause;
2. Click here to shift between Full Screen and Normal Screen;
3. Click here to Share the Video through the pull-down menu;
4. Click this Icon and Play musics through the Bluetooth headset;
5. Click this Icon to select an Audio Track;
6. Click here to enter Menu options.

15. Music Player

Click the Icon 

and enter the Music Playing Interface:

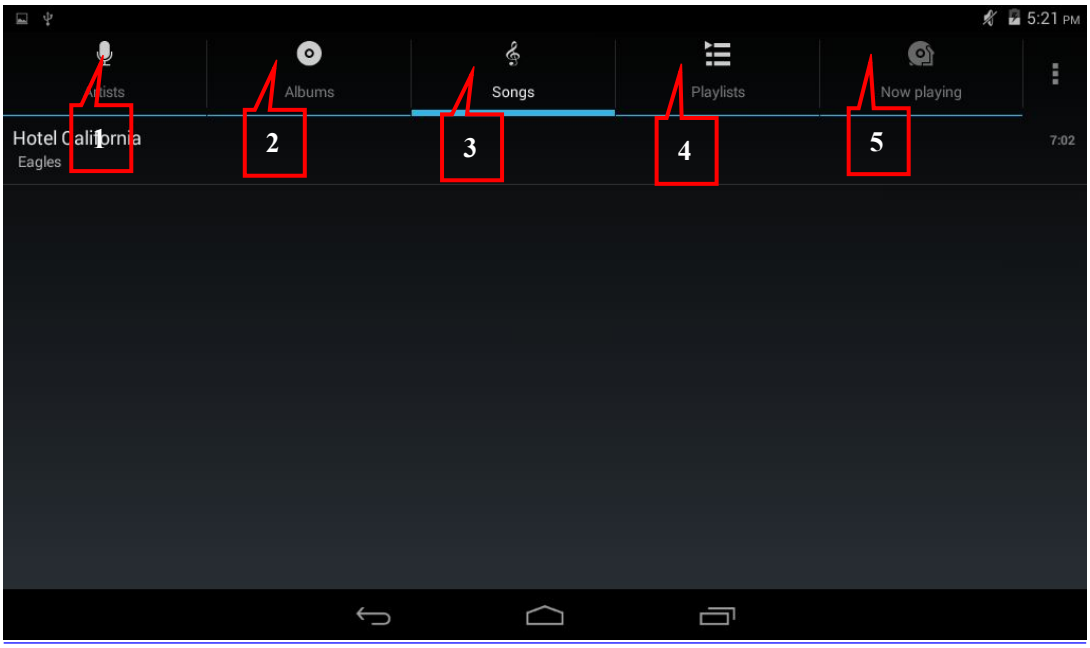

1. Rank audio files according to Artists;
2. Rank audio files according to Albums;
3. Rank audio files according to Songs;
4. Automatically set the Playlists;
5. The Song is Now Playing.

When you have ranked all audio files in proper order, please click the song you want and play it:

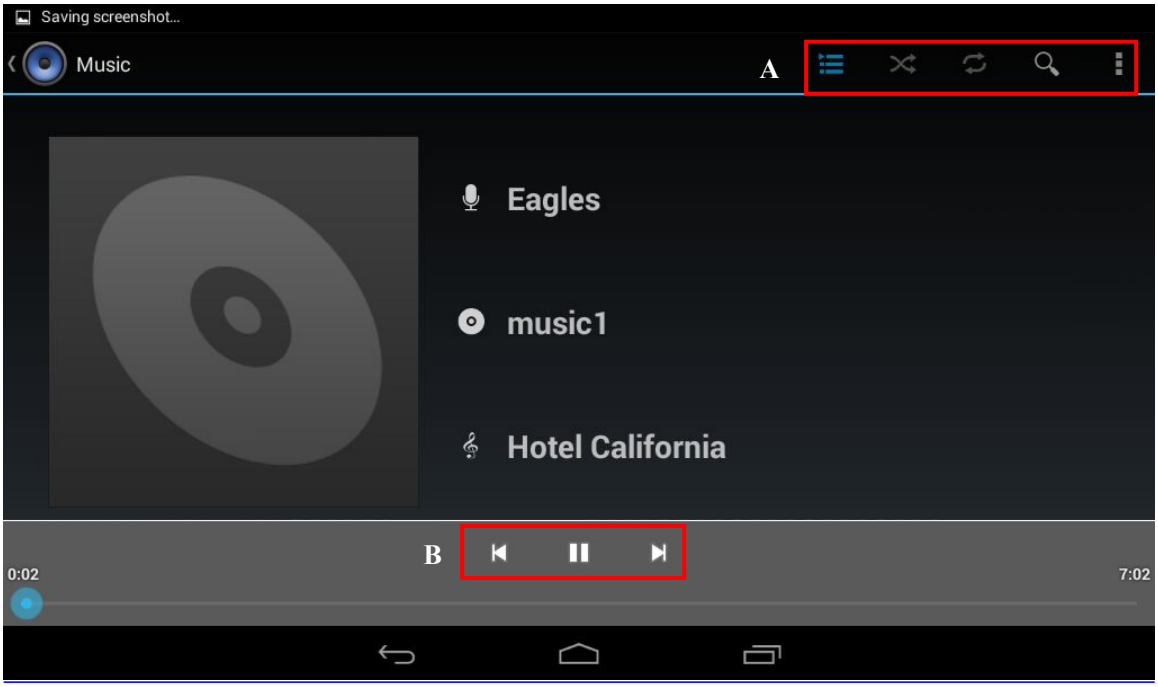

A: From the Left to the Right: Play in order, Loop Playback, Search and Menu Options;

B: From the Left to the Right: Previous Song, Pause (Play) and Next Song.

16. Kidoz APP

Pls go to file manager to find details

Settings

Click the Icon 

to enter the Setting Interface:

Wi-Fi and networks		
Wi-Fi		Configure and manage the wireless access point. (See WIFI Network Settings for details.)
Bluetooth		Please turn on the Bluetooth and click the Bluetooth device name, making it detectable and available for nearby Bluetooth devices.
Data Traffic Usage		Configure and manage the data traffic.
More...	**Airplane mode**	
	Tethering and Hotspot	
	VPN	Configure the VPN
Device		
Audio Profiles	**General**	Ring tone under normal setting;
	Silent	Enter the Silent Mode;
	Outdoor	The volume will automatically reach the maximum;
	BesAudEnh Audio enhancer for earphone	Adjust the Sound Effect of the headset;
Display	**Lock screen notifications**	
	Wallpaper	Wallpaper Settings;
	Brightness	Click and move the sliding block to adjust the

		Screen's brightness, and then click **CONFIRM;**
	Auto Rotate Screen	
	Sleep	
	Daydream	
	Font Size	Adjust the font size;
	Cast screen	User can set it open and make wireless display on HD TV
Storage		Show the Storage Capacity status as well as the Format and Unload function of the Storage Device;
Battery		Show the Battery Data;
Application Programs		Manage and display various application programs within this device;
Personal Settings		
Location		Configure the Google Location-based service and Google search application;
Security	**Screen Lock**	Safeguard the Screen;
	Owner Information	To display the User's information on lock Screen;
	Passwords	
	Device Management	Add or delete a Device Manager;
	Unknown sources	Unknown APK Installation Settings;
	Verify apps	
	Auto-start management	
	App permissions	**Manage app permissions for security and privacy protection**
	Storage of Credentials	Mange the application program to access the security credential and other credentials.
	Install from usb storage	
Language and Input methods	**Language**	Configure the default language;
	Spell checker	
	Personal dictionary	
	Keyboard and Input methods	Configure the default Keyboard and Input methods;
	Voice search	Configure relevant voice parameters;
	Text to speech output	
	Voice control	
	Mouse/Touchpad	Adjust the mouse pointer's speed;
Backup		1. Backup/Restore the Device Data;
System		
Date and Time		Configure or Adjust the Date and Time for the device;
Scheduled power on & off		Upon configuration, this device can be automatically powered on/off at a fixed time;
Accessibility		Enable various functions including Font Size Display and

		Touch Effect and so on
Printing		Connect it with a Printer to print local files;
About Tablet PC		View the Status Information, Battery Service Condition, Legal Information, Model, Android Version, Kernel Version and Version Number.

Wi-Fi Network Settings

As the Wi-Fi connection is important to enable various functions of this device, please firstly configure the Wi-Fi network for your device.

1. Click the Icon → **Settings** → **Wireless and Network.**
2. Please turn **ON Wi-Fi.**

   The device will automatically search all available **Wi-Fi** networks. If the Icon appears, the User shall correctly input the password before he conducts Wi-Fi connection.
3. Click the **Wi-Fi** Network you want → if necessary, please correctly input the password → click **Connect,** and the Icon will appear on the Desktop when the Wi-Fi network has been successfully connected.
4. Click the Icon and go back to the Desktop.

☆ *If the Wi-Fi Network has been hidden, your device will not automatically search it out. You shall click* ***Add Wi-Fi Network,*** *and then input relevant information to add the Wi-Fi Network.*

Usage of Extended Storage

1. Usage of the U Disk

Please insert the U Disk to the OTG Port → Then insert the OTG Connection Cable into the HOST USB Port. When the U Disk has been well connected, you can start to use it.

☆ *Please do not frequently insert and pull the U Disk; otherwise, the U Disk and even the Device may be damaged.*

2. Usage of the SD Card

☆ *This device can support 32GB Memory Card at most.*

Please insert the memory card into the slot, and push it with your finger. At that moment, the main screen will appear **Preparing SD Card**, and finally the TF Card will be well prepared for your service.

Remove the SD Card

Please firstly close all programs or files in the SD card. Click the Icon → **Storage** → SD Card→ Unload the SD Card. Gently push the SD Card, and it will be ejected. Finally, you can take it out.

☆ *Please do not quickly repeat inserting and pulling the SD Card; otherwise, the SD Card may be damaged.*

☆ *Memory Card of famous brand is suggested so as to avoid incompatibleness with the device.*

Connect to PC

1. When the Tablet PC has been connected with your PC, the tablet PC can serve as a portable storage device. Please use the USB cable to connect it to your PC with one end to the USB OTG port and another end to the USB port of PC;
2. With successful connection, the Icon will appear on the screen of the Tablet PC; please click the Icon , and then select **Turn on the USB Storage.** After that, it is possible for the User to conduct Data Storage between your PC and the Tablet PC, as shown below:

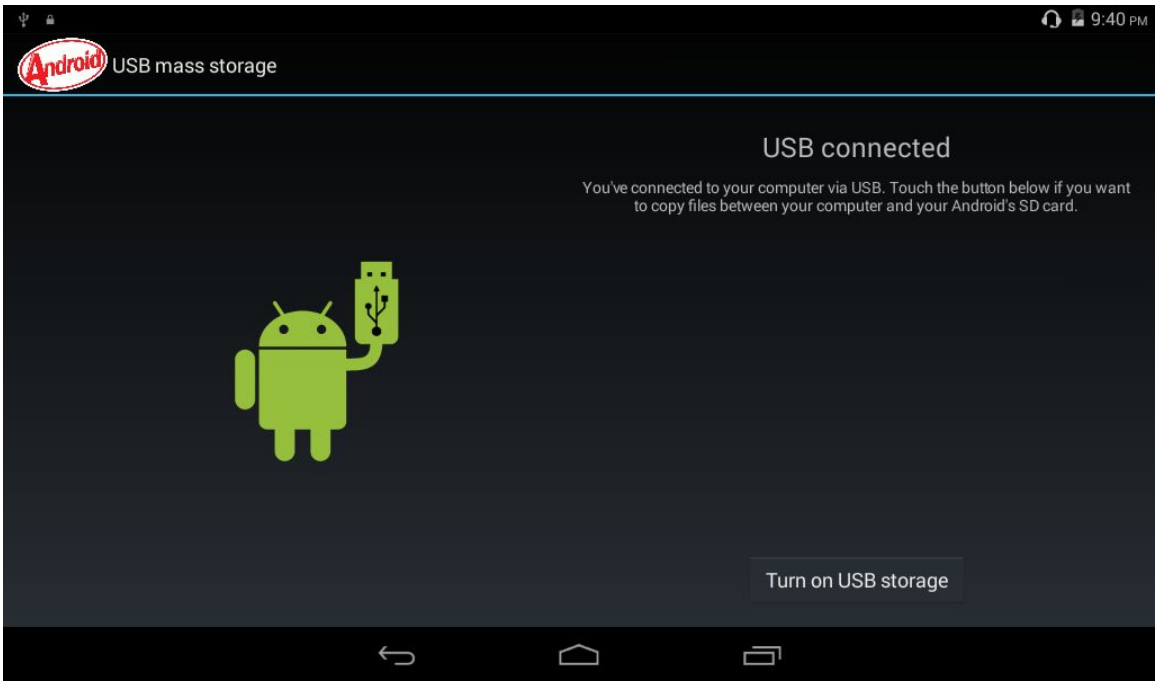
9:40 PM
USB mass storage
USB connected
You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage

Charging

This device can be charged by means of the Power Adapter, one end of USB cable connecting to the Power Supply and the other end to the micro usb port of this device.

During the charging process, the Battery Icon will display itself as ; when this device has been fully charged, the Battery Icon will display .

- The USB cable can be available for charging conncting with computer, but not suggest to do like this, it is better and faster for battery to use A/C adapter for charging
- Although you can use this device during charging process, the charging time will become longer.
- Use this device once a week at least.
- Please fully charge this device at regular intervals.
- Please do not keep this device powered off for quite a long time.

Matters Needing Attention

Please pay special attention to the following notes for the sake of safety:

- Please do not expose this device in the rain or in a humid environment.
- Please make this device stay out of the sun and keep it away from heat sources.
- Please protect the Power Cable. When it has been connected with the power supply, please do not tread on it or place other objects above it. Please pay special attention to the joint of the Power Cable Connection Device.
- Please use the original power adapter to conduct charging for this device. Other chargers may cause damages to this device.
- Please do not disassemble the casing or repair this device all by yourself.
- Please take good care of the Display Screen. Please use soft cloth to clean the fingerprint or dust on the screen rather than hard and rough cloth.
- **Pictures in this document are only for demonstration. Please refer to the actual situation.**

"Power supply adapter info

Manufacturer: Dongguan City GangQi Electronic Co., Ltd
model no.: GQ05-050100-ZG

"Use only the power supply listed in the user instructions"

Li-battery products warning tips:

a) Prevent eye contact: immediately flush eyes thoroughly with plenty water, and seek medical attention.
b) Prevent skin contact: wash skin with plenty of water.
c) Avoid inhalation: provide fresh air and seek medical attention.
d) Prevent fire hazard: notify fire department.
e) Disposal: dispose in accordance with applicable local regulations.

Your product contains batteries, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Service and support

For information: www.lenco.com

For support: http://lencosupport.zendesk.com

Lenco helpdesk:

Germany 0900-1520530 (Local charges)

The Netherlands 0900-23553626 (Local charges + 1ct p/min)

Belgium 02-6200115 (Local charges)

France 03-81484280 (Local charges)

The helpdesk is accessible from Monday till Friday from 9 AM till 6 PM.

When contacting Lenco, you will always be asked for the model and serial number of your product. The serial number can be found on the back of the device. Please write down the serial number below:

Model: Kidztab-520 Mini

Serial number: _____

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products that need repairs to Lenco directly.

Important note: If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in

accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

CE Products with the CE marking comply with the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

Hereby, STL Group BV, Ankerkade 20 NL 5928 PL Venlo, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
The declaration of conformity may be consulted at https://lencosupport.zendesk.com/forums/22413161-CE-Documents

This product operates at 2400 - 2483.5 MHz and is designated only to be used inside a normal household environment. This product is suited for this purpose within all EU counties.

®All rights reserved